

Item Number

RAM-VB-109 & 109A

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the FORD F-150 (2004-2010) LINCOLN MARK LT (2005-NEWER)

SPECIFICATIONS

Placement

Passenger side floor board, under seat

Drilling Required

No - uses existing seat bolts

Pole or Pedestal

Purchased Separately

Seat Configuration

Bucket/Bench

Weight

9.1 lbs.

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 19.25", B = 4.5", C = 4.38", D = 22.5"

Hole Center = 11.63"

Tools required for base installation

15mm socket for base installation and ½" box end wrench for riser attachment . Tools for complete system assembly: pliers, phillips screw driver, #10, ½", 9/16" box end wrench's.

Features

Installs in minutes with no drilling required. Step feature allows optimized placement of mount with a minimal intrusion of passenger leg space. If vehicle has slide out cup holder, RAM-VB-109A kit is suggested.


Misc.

If vehicle has slide out cup holder, consider the RAM-VB-109A kit. The adjustable riser allows for easier access to the slide out cup holder.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

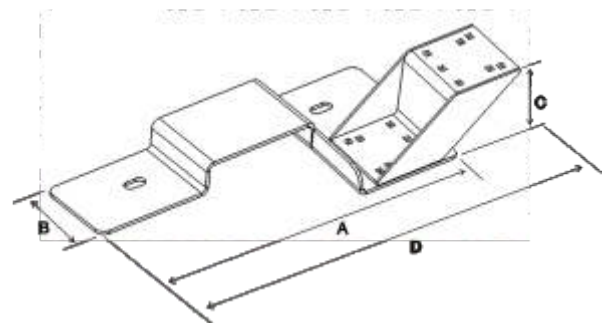

RAM-VB-109, SHOWN WITH
RAM-VB-SB4 RISER. KIT MAY
ALSO BE ORDERED WITH
ADJUSTABLE RISER AS RAM-
VB-109A



Item Number

RAM-VB-109 & 109A

RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the
FORD F-150 (2004-2010)
LINCOLN MARK LT (2005-NEWER)****INSTALLATION INSTRUCTIONS**

Tools required for installation of No-Drill™ base are a 15mm socket and socket wrench, ½" box end wrench.

Note: It is recommended that you attach the riser to the No-Drill™ base prior to installation. Use the provided hardware and your ½" box end wrench to fully tighten the hardware joining these two parts. Insert the carriage bolts from the top so that the rounded head is up and the nuts are on the bottom.

1. Move the passenger seat back to its rearmost position and remove the front seat leg bolts on the passenger side using the 15mm socket.
2. Move the passenger seat to its most forward position and only loosen the two rear seat leg bolts.
3. Now, move the passenger side seat all the way back again and gently raise the front seat legs off the floor board.
- 4 Place the No-Drill™ base between the seat frame legs and floor board.
5. For trucks 2008 and earlier, use the set of holes closest to the front of the base. For 2009 models, use rear set of mounting holes.
6. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
7. Lower the seat down over the base, check alignment of the holes, and re-install the front seat bolts starting the thread by hand. Fully tighten and torque all 4 seat bolts previously loosened or removed to 30 ft lbs.

Note that if you are installing this product into a 2009 F-150 with the slide out cup holder, the RAM-VB-109A is the preferred kit. The standard RAM-VB-109 kit will install but limit the use of the cup holder. To use the RAM-VB-109 with the slide out cup holder, pull the cup holder all the way out if you plan to use it prior to installation. Once installed, the cup holder will not be able to slide back under the center console. The RAM-VB-109A has an adjustable riser that can be positioned so that the cup holder is not interfered with. For base model trucks without the slide out cup holder, the standard RAM-VB-109 kit is ideal.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

