

Item Number _____

RAM-VB-172 & RAM-VB-172-SW1

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the FORD EDGE (2007-2012)

SPECIFICATIONS

Placement

Passenger side, in front, where seat frame meets floor board.

Drilling Required

None - uses existing seat bolts

Seat Configuration

Bucket

Pole or Pedestal

Ordered Separately

Weight

6.1 lbs

Construction/Finish

Steel/Black Powdercoat

Dimensions


A = 18.23", B = 7", C = 1.95",
Hole Center = 16.31"

Features

Installs in minutes with no drilling required.
Lifetime warranty!



Complete Vehicle Mount
RAM-VB-172-SW1

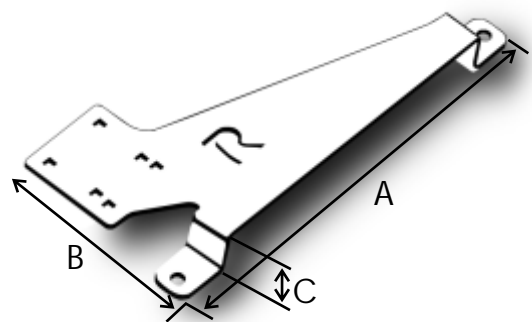

Vehicle Base
RAM-VB-172

National Products, Inc.

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number _____

RAM-VB-172 & RAM-VB-172-SW1

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the FORD EDGE (2007-2012)

INSTALLATION INSTRUCTIONS

Depending on your make and model, there may be pieces of plastic trim that cover the lower front of the seat frame legs. This will need to be removed and stored. If you wish to reinstall this piece of trim, you will have to modify it to fit over the stamped metal base.

1. Move the passenger side seat to its rearmost position. Using an 18MM wrench, loosen and remove the two bolts holding the seat frame legs to the floor board.
2. Place the No-Drill™ base over the seat frame legs with the pedestal platform near the center of the vehicle.
3. Re-install the two seat frame bolts. Start the thread by hand and then fully tighten with the 18MM wrench.



National Products, Inc.
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
Website: www.ram-mount.com
Email: staff@ram-mount.com

